

MODEL 2010ECL-NC

RMS Signal Monitor Operations Manual

Addendum to the 2010ECL Operations Manual Firmware Version 16AL01xx

1.1.1 WATCHDOG LATCH SELECT (SEL1)

The SEL1 jumper is removed. An AC Line brownout condition will reset the WDT ERROR fault mode when the AC Line is restored. The WDT Error indicator will remain illuminated until a Reset command is issued via the front panel RESET button or External Reset input.

See Section 1.2.3.

1.1.2 RED INTERFACE CABLE FAULT SELECT (SEL4)

The SEL4 jumper is factory installed. The Red Cable Fault function will be enabled causing the Signal Monitor to enter the fault mode if the Red Interface cable is not connected.

See Sections 4.1 and 4.5.4.

EBERLE DESIGN INC.

3510 East Atlanta Avenue Tel (480) 968-6407
Phoenix, AZ 85040 USA Fax (602) 437-1996
www.EDIttraffic.com



